



MANAGING THE **PEOPLE** WHO USE YOUR SYSTEM

All Vision Pro™ Software Users **MUST** be assigned a Software Role. The following matrix shows the Permissions of each Role.

Function	Description	Administrator	Maintenance	Supervisor	IT	Safety Manager	Enable Operator	Reports Only	Maps Only
Access Points	Access points within the WAM/Beacon/Access Point module	Edit	Read Only	-	Edit	-	-	-	-
Batteries	Batteries module	Edit	Edit	Read Only	-	-	-	-	-
Beacons	Beacons within the WAM/Beacon/Access Point module	Edit	Read Only	-	Edit	-	-	-	-
Group Assignments	Group assignments only in the various modules (group, people, or vehicle). Note: to assign groups in the people or vehicle modules you would need at least edit privilege for that section of that module as well.	Edit	Read Only	Edit	-	Edit	-	-	-
Group General Information	Group module (list and detail views) excluding assignments	Edit	Read Only	Read Only	-	Read Only	-	-	-
Impact Severities	"Sliders" in the system settings screen (note that you should not need the "system settings" enabled to enable just this section and enabling system settings will not automatically enable this).	Edit	Edit	-	-	-	-	-	-
Maintenance Intervals	Maintenance criteria module	Edit	Edit	-	-	-	-	-	-
Operator Credentials	People driver section (must have "people general info" read enabled at a minimum to use this).	Edit	Read Only	Edit	-	Edit	Read Only	-	-
People General Information	People general section (list and detail views) including export	Edit	Read Only	Edit	Read Only	Read Only	Read Only	-	-
People Import	People import wizard (no "read" option)	Edit	-	-	-	-	-	-	-
Operator License Reset	People selection for licensed/not licensed/suspended (must have "people general information" read enabled at a minimum to leverage this). There is no read option; it is automatically selected when "edit" is selected for "People driver credentials.".	Edit	-	Edit	-	-	Edit	-	-
People Software Credentials	People "software" section including role assignment (must have "people general information" read enabled at a minimum to leverage this). You should not be able to assign anyone else a role with "software role" edit capabilities unless your role has it enabled.	Edit	Read Only	Read Only	Read Only	-	-	-	-
People Subscriptions	People subscription assignment section (must have "people general information" read enabled at a minimum to leverage this).	Edit	Read Only	Read Only	Read Only	-	-	-	-

Function	Description	Administrator	Maintenance	Supervisor	IT	Safety Manager	Enable Operator	Reports Only	Maps Only
Reports and Dashboards	Reports and dashboards section (edit/delete function dependent on individual report setting (note that "read" option means no reports can be created, deleted, saved)).	Edit	Edit	Edit	Edit	Edit	-	Edit	-
Sensor Settings	"Sensors" in the system settings screen (you should not need the "system settings" enabled to enable just this section and enabling system settings will not automatically enable this).	Edit	Edit	Read Only	-	-	-	-	-
Server Settings	"Servers" in the system settings screen (you should not need the "system settings" enabled to enable just this section and enabling system settings will not automatically enable this).	Edit	-	-	Edit	-	-	-	-
Software Roles	Roles module.	Edit	-	-	Read Only	-	-	-	-
Checklists - Job	Checklists module for job checklists.	Edit	-	Read Only	-	-	-	-	-
Checklists - Safety	Checklists module for safety checklists.	Edit	Edit	Read Only	-	Edit	-	-	-
System Settings	All system settings sections except those explicitly listed separately.	Edit	Read Only	Read Only	Edit	-	-	-	-
Text Messaging	Messaging module.	Edit	Edit	Edit	-	-	-	-	-
Vehicle Behavior Assignments	Assign behaviors within the vehicle module.	Edit	Read Only	Read Only	-	Read Only	-	-	-
Vehicle Behavior Profiles	Behavior modification module.	Edit	Edit	Read Only	-	Edit	-	-	-
Vehicle General Information	Vehicle general section.	Edit	Edit	Read Only	Read Only	-	-	-	-
Vehicle Status	Vehicle status section (no edit option).	Read Only	Read Only	Read Only	Read Only	-	-	-	-
Vehicle Troubleshooting	Vehicle troubleshooting section.	Edit	Edit	Edit	Edit	-	-	-	-
Visibility	Visibility module (edit is for settings section).	Edit	Read Only	Read Only	Read Only	-	-	-	Edit
WAMs	WAMs within the WAM/Beacon/Access Point module.	Edit	Read Only	Read Only	Edit	-	-	-	-
Wi-Fi Settings	Wi-Fi section of system settings (you should not need the "system settings" enabled to enable just this section and enabling system settings will not automatically enable this).	Edit	Read Only	Read Only	Edit	-	-	-	-
Zones	Zone creation module.	Edit	Read Only	Read Only	-	-	-	-	-