



## MANAGING THE **ASSETS** IN YOUR SYSTEM

How to view, edit, delete, and add vehicle data  
in the Vision Pro™ software database of your  
industrial truck management system.

## TABLE OF CONTENTS

|  |    |
|--|----|
| <b>INTRODUCTION</b>  | 1  |
| <b>VIEWING VEHICLES</b>                                    | 2  |
| <b>Viewing the Vehicle List</b>                            | 2  |
| <b>Filtering/Search the Vehicle List</b>                   | 3  |
| <b>Sorting the Vehicle List</b>                            | 3  |
| <b>Viewing Specific Vehicle Data (Read-Only)</b>           | 4  |
| <b>EDITING VEHICLES</b>                                    | 6  |
| <b>Choosing Vehicles to Edit from Main Vehicles Screen</b> | 6  |
| <b>Editing a Single Vehicle</b>                            | 7  |
| Editing Basic Vehicle Data                                 | 7  |
| Editing Vehicle Status                                     | 8  |
| Editing Vehicle's General Profile                          | 9  |
| Editing Vehicle's Behavior Profile                         | 10 |
| Editing Vehicle's Group Assignment                         | 10 |
| Saving Edits to Vehicle                                    | 12 |
| <b>Batch-Editing Multiple Vehicles</b>                     | 13 |
| <b>ADDING VEHICLES</b>                                     | 15 |
| <b>Adding Vehicles One at a Time</b>                       | 15 |
| <b>Duplicating Vehicles to Save Time</b>                   | 16 |

## INTRODUCTION

The **ASSETS** section of your Vision Pro™ software lets you manage all the equipment associated with your industrial truck management system:


- The **Vehicles** being monitored.
- Basic **Checklists** for each Vehicle Type.
- Advanced **Behavior Profiles** for each Vehicle Type (automatic system reactions to various events, such as impacts).
- **Planned Maintenance** profiles for each Vehicle Type, if applicable and licensed.
- Vehicle **Batteries**, if applicable and licensed.
- System **Devices**, including Vehicle-mounted devices (VACs) and communication infrastructure hardware (WAMs, Beacons, and/or Wi-Fi Access Points).

---

This User Guide details how **Vehicles** are viewed, edited, and managed in the Vision Pro™ software.

To get started, as shown below...

1. From the Vision Pro™ software home screen, click the **Assets** drop-down list.
2. Select **Vehicles**.

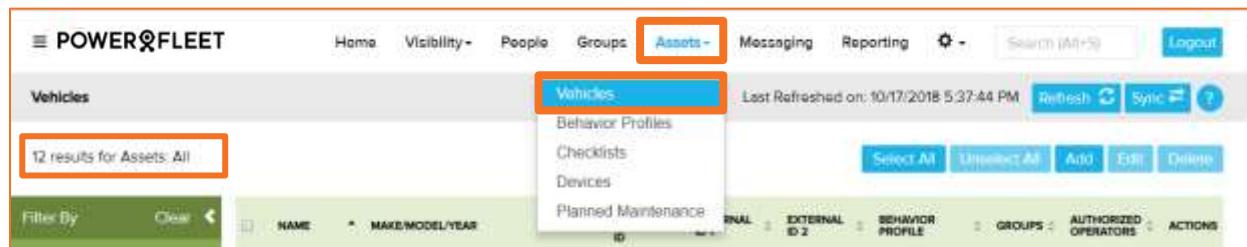

# VIEWING VEHICLES

## NOTE

Through an automated “in-fleeting” process, the Vision Pro™ database will populate with some Vehicle information automatically, as the Vehicle-mounted devices (VACs) are installed and communicate with the Vision Pro server.

Vehicle installers — whether your own employees, the vehicle OEM, a dealer, or another third party — will be certified on proper VAC installation/configuration.

For more information on VAC installation and configuration, including how Vehicle data is entered, refer to the “**Powerfleet VAC4 Hardware Users Guide**” and supporting tutorial videos on I.D. Systems’ Training Portal. (If you do not have access to these resources, contact your I.D. Systems program manager.)

## Viewing the Vehicle List

When you click **Vehicles** on the **Assets** drop-down list, the **Vehicles** screen will appear:

| NAME     | MAKE/MODEL/YEAR            | ID/VEHICLE ID | EXTERNAL ID 1 | EXTERNAL ID 2 | BEHAVIOR PROFILE                 | GROUPS | AUTHORIZED OPERATORS | ACTIONS |
|----------|----------------------------|---------------|---------------|---------------|----------------------------------|--------|----------------------|---------|
| PR 00016 | TOYOTA/DFGCU25/2015        | PR-16         |               |               | Forklift rider-electric-safety   | 2      | 17                   |         |
| PR 00003 | CROWN/PE3540-60/2001       | PR-3          |               |               | Pallet Jack rider safety profile | 2      | 17                   |         |
| PR 00019 | YALE/MPE060LEN24T2748/2010 | PR-10         |               |               | Pallet Jack rider safety profile | 2      | 17                   |         |

This screen lists the vehicles detected by the system [A], including data entered during the installation process, such as Vehicle **Name** (typically the ID stenciled on Vehicle), **Make/Model/Year**, and **Vehicle ID**.

This screen also shows data added (by default or by a Software User) [B], including **External IDs** (optional), **Behavior Profile** (see separate User Guide), the number of **Groups** the Vehicle belongs to (see separate User Guide), and how many **Authorized Operators** can access the Vehicle.

You can filter your view of the Vehicle list [C] in a variety of ways, as described below.



## Filtering/Search the Vehicle List

On the left side of the **Vehicles** screen, as shown at left, you can filter the Vehicles list by:

- A typed-in **Text** search for specific Vehicles.
- Vehicle **Expirations** (in Groups that have expiration dates).
- **Asset Access** status (in/out of service and locked out).
- **Planned Maintenance** status (overdue, coming due). Planned Maintenance is an optional (licensed) feature.
- **Diagnostic Errors**.
- **Firmware Upgrades** status.
- Data **Synchronization** status.
- **Access Bypassed** status.
- **Group** (a drop-down list of Operator-Vehicle Groups defined in the system, including the default **ALL\_ACCESS** Group.)
- **Vehicle Type** (a drop-down list of default and/or added Vehicle Types defined in the system, such as Forklift Rider, Order Picker, Pallet Jack, Tow Tractor, etc.).
- When Vehicles were **Last Detected** (a drop-down list of time frames, from “**This hour**” to “**Not Detected**” at all).

## Sorting the Vehicle List

To sort Vehicles by any column, click the **up/down arrow** on top of that column **[A]**. At the bottom of the screen, you can choose how many Vehicles are visible on the screen at one time (e.g. **10** per screen) **[B]**, and which screen to view (e.g. with 10 Vehicles per screen, screen **1** will show Vehicles 1-10) **[C]**.

| NAME       | MAKE/MODEL/YEAR     | IDSY VEHICLE ID | EXTERNAL ID 1 | EXTERNAL ID 2 | BEHAVIOR PROFILE                    | GROUPS | AUTHORIZED OPERATORS | ACTIONS |
|------------|---------------------|-----------------|---------------|---------------|-------------------------------------|--------|----------------------|---------|
| FR 00016 A | TOYOTA/8FGCU25/2018 | FR-16           |               |               | last Forklift rider-electric-safety | 2      | 17                   |         |

## Viewing Specific Vehicle Data (Read-Only)

To see data on a specific Vehicle on the Vehicle list, click on the name of that Vehicle:

| NAME     | MAKE/MODEL/YEAR     | IDSY VEHICLE ID | EXTERNAL ID 1 | EXTERNAL ID 2 | BEHAVIOR PROFILE                          | GROUPS | AUTHORIZED OPERATORS | ACTIONS |
|----------|---------------------|-----------------|---------------|---------------|---|--------|----------------------|---------|
| FR 00016 | TOYOTA/8FGCU25/2018 | FR-16           |               |               | Interplast Forklift rider-electric-safety | 2      | 17                   |         |

Vehicle-specific data includes the following:

| Vehicle Details                          |           |          |           |            |                |         |           |  |  | Last Refreshed on: 10/19/2018 3:26:34 PM |                              |                              | Actions                      |                              |
|--|-----------|----------|-----------|------------|----------------|---------|-----------|--|--|--|------------------------------|------------------------------|------------------------------|------------------------------|
| Vehicle Status                           |           |          |           |            |                |         |           |  |  | General Profile                          |                              |                              | Behavior Profile             |                              |
| Group Assignment                         |           |          |           |            |                |         |           |  |  | Troubleshooting                          |                              |                              | Logs                         |                              |
| System:                                  | Operator: | Vehicle: | Behavior: | Checklist: | Authorization: | WIFI:   | Geofence: |  |  | Last Tran Codes                          |                              |                              |                              |                              |
| 18                                       | 109       | 30       | 6         | 6          | 23             | 6       | 1         |  |  | 10/19/2018 10:19:20 10:19:20             | 10/19/2018 10:19:20 10:19:20 | 10/19/2018 10:19:20 10:19:20 | 10/19/2018 10:19:20 10:19:20 | 10/19/2018 10:19:20 10:19:20 |
| 18                                       | 109       | 30       | 6         | 6          | 23             | 6       | 1         |  |  | 10/19/2018 10:19:20 10:19:20             | 10/19/2018 10:19:20 10:19:20 | 10/19/2018 10:19:20 10:19:20 | 10/19/2018 10:19:20 10:19:20 | 10/19/2018 10:19:20 10:19:20 |
| 10/19/2018 7:22 AM                       | 8:35 AM   | 10:33 AM | 2:37 PM   | 2:49 PM    | 2:57 PM        | 5:30 PM | 2:45 AM   |  |  |  |                              |                              |                              |                              |
| VAC Tran Codes with Synchronization Date |           |          |           |            |                |         |           |  |  | Go Back                                  | Search                       |                              | Add                          |                              |

In the data bar at the top of screen is the name of the specific Vehicle you are viewing [A], along with the date/time the Vehicle's data was last refreshed [B].

On the left side of screen are thumbnail data blocks for each

Vehicle in the system [C]. You can scroll down/up and click on any thumbnail to switch to that Vehicle. You can also use the text box [D] to search for a Vehicle.

Basic Vehicle information [E] includes data from the installation/onboarding process: Vehicle **Name** (typically the ID stenciled on Vehicle), **Vehicle Type**, **Make**, **Model**, and **Year**. This information can be changed in the software.

**Vehicle Status** data [F] is automatically generated. Most of it cannot be changed. It includes: **In/Out of Service**; time Vehicle was last **Detected**; **Location** Vehicle was last detected (e.g. near which Wireless Access Point); what **Operator**, if any, is logged into Vehicle; whether or not Vehicle is in safety **Compliance**; what **Access Control** mode the Vehicle is in; whether or not the Vehicle has been **Synchronized** with the system database; when the Vehicle has its **Next PM Due**; how many **Diagnostic Errors** the Vehicle has; which network communications device the Vehicle is **Connected Via**; and the **IP Address** of that network device.

**General Profile** information [G] includes both automatically generated and optionally input data:

Auto-generated data that CAN be changed at the VAC: **Vehicle ID**

Auto-generated data that CANNOT be changed: the **VAC Serial Number** (the Vehicle-mounted device's unique ID); the VAC's **MAC Address** (the device's hardware ID number on your network); the VAC's initial **Date In-Service**; and the date the VAC was **Last Modified**.

Optional data that can be added or changed manually: Vehicle **Purchase Date**; other **External IDs** for the Vehicle (e.g. serial number or department code); **Vehicle Class** (Vehicle Type designation; the default is "Other"); Vehicle **Weight Class**; Vehicle load **Capacity**; and the Vehicle's **Parking Location**.

The **Behavior Profile** section [H] lists the Behavior Profile(s) assigned to the Vehicle. (See separate User Guide.)

The **Group Assignment** section [I] shows data on the Groups to which the Vehicle belongs.

**Troubleshooting** information [J] shows data **Tran Codes**, **Firmware Versions**, and **Cumulative Hour Meter Readings**.

The buttons in the data bar at the bottom of the screen [K] let you to [Go Back](#) to the previous screen; [Delete](#) the Vehicle; [Add](#) a new Vehicle; [Duplicate](#) the current Vehicle (a shortcut to add a new, similar Vehicle); or [Edit](#) the current Vehicle. You can also edit Vehicles from the main [Vehicles](#) screen, as described in the next section.

## EDITING VEHICLES

You can edit a Vehicle from its specific, read-only data screen, as noted above. Or you can edit a Vehicle (or batch-edit multiple Vehicles) from the main [Vehicles](#) screen.

### Choosing Vehicles to Edit from Main Vehicles Screen

| NAME     | MAKE/MODEL/YEAR            | IDSY VEHICLE ID | EXTERNAL ID 1 | EXTERNAL ID 2 | BEHAVIOR PROFILE                  | GROUPS | AUTHORIZED OPERATORS | ACTIONS   |
|----------|----------------------------|-----------------|---------------|---------------|-----------------------------------|--------|----------------------|---|
| RT 00012 | YALE/NR035EANL36TE119/2006 | RT-12           |               |               | Reach truck safety profile        | 2      | 17                   | <a href="#">Edit</a> <a href="#">Delete</a> <a href="#">Duplicate</a> |
| PR 00010 | YALE/MPE060LEN24T2748/2010 | PR-10           |               |               | Pallet Jack, rider safety profile | 2      | 17                   | <a href="#">Edit</a> <a href="#">Delete</a>                           |

1. To edit one or multiple Vehicles, click the [check boxes](#) next to their names.
2. To edit all Vehicles on the page, click the [check box](#) at top of [Name](#) column.
3. To edit all Vehicles in the database, click the [Select All](#) button at top of screen.
4. To de-select all selected Vehicles, click the [Unselect All](#) button at top of screen.
5. To “batch-edit” all selected Vehicles at one time, click [Edit](#) button at top of screen. **NOTE: use batch-edit ONLY if changes will be identical for ALL selected Vehicles.**
6. To delete all selected Vehicles, click the [Delete All](#) button at top of screen.
7. To delete one Vehicle, click the drop-down arrow at end of Vehicle row, then select [Delete](#). You can also [Edit](#) and [Duplicate](#) Vehicles this way.

NOTE: attempting to delete Vehicle(s) will launch a [Delete Vehicle](#) confirmation screen, shown at right. To finalize deletion, you must click [OK](#) (or you can [Cancel](#) it).



8. After editing Vehicle data, you can update the main **Vehicles** screen at any time by clicking **Refresh** button at top of screen.
9. The system will automatically “sync” software changes with the Vehicle-mounted devices (VACs) within about four hours. However, if you need to download changes immediately, click the **Sync** button on the menu bar at top of screen.

**TIP:** when editing multiple Vehicles, complete ALL edits before you click on **Sync**. Syncing after EACH edit may slow system down.

## Editing a Single Vehicle

From the main **Vehicles** screen...

The screenshot shows the POWERFLEET Vehicles screen. At the top, there is a navigation bar with links for Home, Visibility, People, Groups, Assets, Messaging, Reporting, and a search bar. Below the navigation bar is a toolbar with buttons for Refresh, Sync, and other functions. The main area displays a table of vehicles. A vehicle named "RT 00012" is selected, as indicated by a checkmark in the "Selected" column. The table columns include NAME, MAKE/MODEL/YEAR, ID#Y- VEHICLE ID, EXTERNAL ID 1, EXTERNAL ID 2, BEHAVIOR PROFILE, GROUPS, AUTHORIZED OPERATORS, and ACTIONS. The ACTIONS column contains buttons for Select All, Unselect All, Add, Edit, and Delete. A dropdown menu in the ACTIONS column for the selected vehicle is open, showing options like Duplicate, Edit, and Delete. The "Edit" option is highlighted with an orange box and a callout labeled "2". The vehicle's name "RT 00012" is highlighted with an orange box and a callout labeled "3a". The "Edit" button in the top right of the screen is highlighted with an orange box and a callout labeled "1b".

1. (a) Click the **check box** next to the name of Vehicle you want to edit, then (b) click the **Edit** button at top of screen.

OR

2. At the end of the row of the Vehicle, you want to edit, click the arrow under **Actions**, then select **Edit** from the drop-down list.

OR

3. (a) Click on the Vehicle **Name**, then, (b) from the Vehicle's read-only data screen, shown below, click the **Edit** button at bottom of screen.

The screenshot shows the POWERFLEET vehicle detail screen for vehicle "RT 00012". The top navigation bar is visible with links for Home, Visibility, People, Groups, Assets, Messaging, Reporting, and a search bar. The main area displays a table of vehicle details. The vehicle's name "RT 00012" is highlighted with an orange box and a callout labeled "3b". The table columns include Name, Vehicle Type, Make, Model, and Year. At the bottom of the screen, there is a blue footer bar with buttons for Go Back, Delete, Add, Duplicate, and Edit. The "Edit" button is highlighted with an orange box and a callout labeled "3b".

No matter which way you access the Vehicle-specific data of any single Vehicle, the Vehicle's editable fields are as follows.

### Editing Basic Vehicle Data

Vehicle Type: Forklift Rider

Make: TOYOTA

Model: 8FGCU25

Year: 2018

**NOTE:** This data is usually input into the system database through the in-fleeting process, including database setup and Vehicle-mounted device (VAC) installation.

If you have questions about this process, contact your I.D. Systems program manager or [support@powerfleet.com](mailto:support@powerfleet.com).

Usually, this data does not need to be changed. However, if the data has errors, or you want to make other changes, you can do so here.

**[A] Vehicle Name:** typically, this is the ID stenciled on the Vehicle itself, but you can name Vehicles as you wish. For example, you might want to include the department (e.g. "Receiving FR 016") to help organize reports and alerts.

**[B] Vehicle Type:** A pre-defined drop-down list, shown at right, displays the available Vehicle Types. The vehicle type defaults to the selection chosen by the installer during the in-fleeting process.



**[C] Vehicle Make, Model, and Year:** This data is usually entered into the database during in-fleeting, prior to system launch.

## Editing Vehicle Status

| Compliance | Access Control | Synchronized | Next PM Due | Diagnostic Errors | Connected Via | IP Address |
|------------|----------------|--------------|-------------|-------------------|---------------|------------|
|            |                |              |             |                   |               |            |

The only editable **Vehicle Status** field is **Status [D]**. The drop-down list shows the only options: **In Service** or **Out of Service**. Current Vehicle status is displayed automatically.

**NOTE:** In certain situations, you may want to take a Vehicle out of service (or put it back into service) using this software (e.g. if a Vehicle is due for PM and you want to prevent Operators from driving it). However, putting a Vehicle in/out of service is typically performed by a Maintenance or Master Operator, directly on the VAC on the Vehicle.

All other **Vehicle Status** data is automatically generated and cannot be changed.

## Editing Vehicle's General Profile

| General Profile                      |          |   |   |
|--------------------------------------|----------|---|---|
| IDSY Vehicle ID<br>FR - 10001        | <b>E</b> | External ID 1<br>62389                    | <b>G1</b>                               |
| VAC Serial Number<br>ESV-ES33191-005 |          | Vehicle Class<br>Other                    | External ID 2<br><b>G2</b>              |
| Purchased Date<br>12/23/2013         |          | Capacity<br>6000                          | Weight Class<br><b>I</b>                |
| MAC Address<br>00:0A:0A:0A:0A:0A     |          | Date In-Service<br>10/29/2018 12:05:05 PM | Parking Location<br><b>J</b>            |
|                                      |          |   | Last Modified<br>11/13/2018 10:32:36 AM |

Some **General Profile** data is automatically generated during Vehicle in-fleeting and on-Vehicle device (VAC) installation. Other data is optional and may be input either during in-fleeting or manually at another time.

Auto-generated data that CAN be edited: the number portion of the **Vehicle ID [E]** (a short-form Vehicle ID in the database). The Vehicle ID can only be changed at the VAC. NOTE: the two-letter prefix, denotes Vehicle Type (e.g. "FR" for Forklift Rider).

Auto-generated data that CANNOT be edited: **VAC Serial Number**; the VAC's **MAC Address** (the device's hardware identification number that uniquely identifies each device on a network.); the VAC's initial **Date In-Service**; and the date the VAC was **Last Modified**.


Optional data that CAN be edited:

**[F] Vehicle Purchase Date.** Either enter the date directly into the field (MM/DD/YYYY format) or click on calendar icon and, on the pop-up calendar (shown at right), click on a date.



**[G] External IDs** for the Vehicle. These would typically be the Vehicle's serial number and department name or code. Enter the ID code(s) directly into the field(s).

**[H] Vehicle Class**, an industry-wide Vehicle Type designation. Click on arrow to view drop-down list (shown at right).

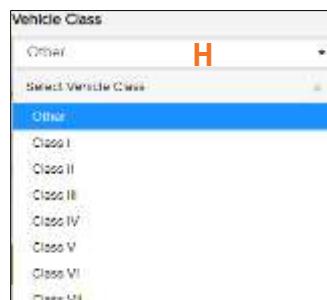

Three customizable, free-text fields: Vehicle **Weight Class [I]**; Vehicle load **Capacity [J]**; and the Vehicle's **Parking Location** at your facility **[K]**.

## Editing Vehicle's Behavior Profile

A standard **Behavior Profile** (for a basic safety checklist) is assigned to each Vehicle automatically, based on Vehicle Type.

You can also create new, custom Profiles for different Vehicle Types (see separate User Guide).

The drop-down list **[L]** will display the Vehicle's default Profile. To change the Profile, click on the drop-down arrow, then click on a selection from the list.

## Editing Vehicle's Group Assignment


The **Group Assignment** section displays data on the Groups to which the Vehicle belongs: Group **Name**; Group **Description**, if any; **External ID** (a unique identifier for the database); Group **Expiration Date**, if any; and the **Number of Operators** assigned to the Group. (For more on setting up Groups, see separate User Guide.)

| Group Assignment |             |             |                 |                     | M | + Add Group: | Edit |
|------------------|-------------|-------------|-----------------|---------------------|---|--------------|------|
| Name             | Description | External ID | Expiration Date | Number of Operators |   |              |      |
| Maintenance      |             | GRP_5       |                 | 2                   |   |              |      |
| Warehouse        |             | GRP_4       |                 | 16                  |   |              |      |


You can change a Vehicle's **Group Assignment** in three ways: **Add**, **Edit**, or **Remove**.

### Add New Group Assignment to Vehicle:

- Click **+ Add Group** **[M]**.
- A pop-up screen will appear, shown at right, with a list of available Groups **[N]**.
- To add Vehicle to a new Group, click on the Group name **[O]**, to highlight it in green.
- Then click **[P]**. The Group will move from the list to the "selected" box **[Q]**.

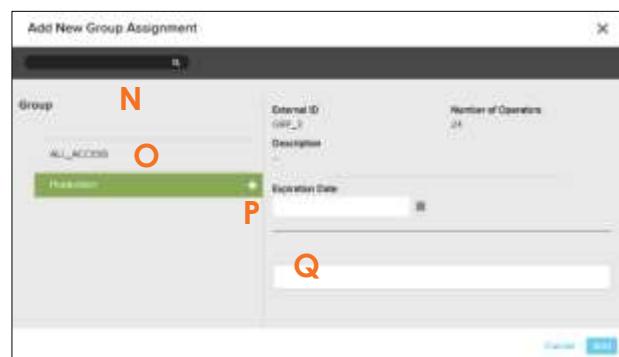

- To remove a Group from the “selected” box [Q] and send it back to the Group list, click  [R]
- Add or change the Group's **Expiration Date** [S] by either typing date directly into field (MM/DD/YYYY format) or clicking on calendar icon [T] and then clicking on a date in the pop-up calendar,
- When you finish choosing the Vehicle's Group and Expiration Date, click  [U]. The pop-up screen will disappear and any changes you made will be saved. (You can also click **Cancel** to leave the pop-up screen without saving changes.)

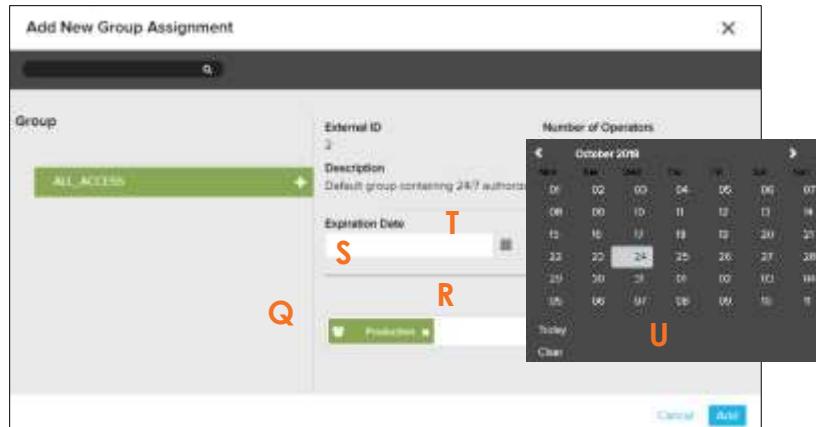


Edit Vehicle Group Assignments:

| Group Assignment |             |             |                 |                     |  Add Group |  Edit   |  Cancel   |
|------------------|-------------|-------------|-----------------|---------------------|---|--|--|
| NAME             | DESCRIPTION | EXTERNAL ID | EXPIRATION DATE | NUMBER OF OPERATORS |   |  |  |
| Maintenance      | GRP_5       |             |                 | 2                   |   |  |  |
| Warehouse        | GRP_4       |             |                 | 16                  |   |  Edit |  Remove |

- On **Group Assignment** screen, click  [V],  OR, click arrow at end of Group row and select **Edit** from the drop-down list [W].

A pop-up screen will appear, shown at right, listing the Vehicle's current Groups [X].

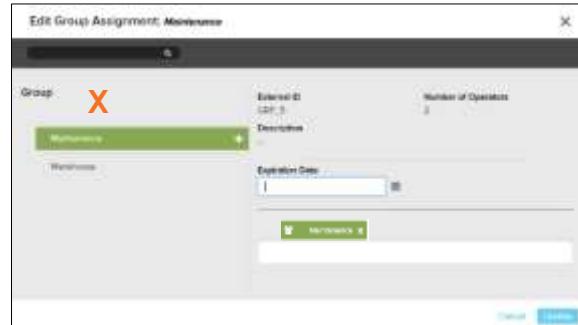

- To make changes to the Vehicle's current Groups, follow the same steps explained above under Add New Group Assignment to Vehicle section:
  - Click on Group name to highlight it in green.
  - Click  to move Group from list to the “selected” box.
  - To remove Group from “selected” box and send it back to Group list, click .
  - Add/change Group's **Expiration Date** by typing directly into field (MM/DD/YYYY) or by clicking on calendar icon, then clicking on date in pop-up calendar.
  - When you finish editing the Vehicle's Group(s), click  (or **Cancel**).

## Remove Vehicle Group Assignments:

| Group Assignment |             |             |                 |                     | + Add Group | Edit | ▲ |
|------------------|-------------|-------------|-----------------|---------------------|-------------|------|---|
| NAME             | DESCRIPTION | EXTERNAL ID | EXPIRATION DATE | NUMBER OF OPERATORS |             |      |   |
| Maintenance      |             | GRP_5       |                 | 2                   |             |      |   |
| Warehouse        |             | GRP_4       |                 | 16                  |             |      |   |

- On **Group Assignment** screen, click arrow at end of Group row and select **Remove** from the drop-down list [Y]. A pop-up screen will appear, shown at right. To confirm removal of Group, click **OK** (or you can **Cancel** it).



## Saving Edits to Vehicle

After making any changes to a Vehicle's Basic Data, Status, General Profile, Behavior Profile, or Group Assignment, click **Save** on the menu bar at bottom of screen [Z]. (You can also click **Cancel** to leave edit mode without saving changes.)

Vehicle Status

| Status   | In Service |          |            |                |              |             |                   |               |            |
|----------|------------|----------|------------|----------------|--------------|-------------|-------------------|---------------|------------|
| Detected | Location   | Operator | Compliance | Access Control | Synchronized | Next PM Due | Diagnostic Errors | Connected Via | IP Address |

**REMINDER:** The system will automatically "sync" all changes with all vehicle-mounted devices (VACs) within about four hours. If you need VACs/Vehicles to receive changes right away, click the **Sync** button in menu bar at top of screen.

**NOTE:** If you plan to sync multiple Vehicles, wait until ALL Vehicle edits are complete before syncing. (Syncing after EACH Vehicle edit would slow the system down.)

## Batch-Editing Multiple Vehicles

NOTE: This feature is useful if you want to change the SAME data fields for several Vehicles. Use batch-edit ONLY if changes will be identical for ALL selected Vehicles.

1a

1b

1c

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465

466

467

468

469

470

471

472

473

474

475

476

477

478

479

480

481

482

483

484

485

486

487

488

489

490

491

492

493

494

495

496

497

498

499

500

501

502

503

504

505

506

507

508

509

510

511

512

513

514

515

516

517

518

519

520

521

522

523

524

525

526

527

528

529

530

531

532

533

534

535

536

537

538

539

540

541

542

543

544

545

546

547

548

549

550

551

552

553

554

555

556

557

558

559

560

561

562

563

564

565

566

567

568

569

570

571

572

573

574

575

576

577

578

579

580

581

582

583

584

585

586

587

588

589

590

591

592

593

594

595

596

597

598

599

600

601

602

603

604

605

606

607

608

609

610

611

612

613

614

615

616

617

618

619

620

621

622

623

624

625

626

627

628

629

630

631

632

633

634

635

636

637

638

639

640

641

642

643

644

645

646

647

648

649

650

651

652

653

654

655

656

657

658

659

660

661

662

663

664

665

666

667

668

669

670

671

672

673

674

675

676

677

678

679

680

681

682

683

684

685

686

687

688

689

690

691

692

693

694

695

696

697

698

699

700

701

702

703

704

705

706

707

708

709

710

711

712

713

714

715

716

717

718

719

720

721

722

723

724

725

726

727

728

729

730

731

732

733

734

735

736

737

738

739

740

741

742

743

744

745

746

747

748

749

750

751

752

753

754

755

756

757

758

759

760

761

762

763

764

765

766

767

768

769

770

771

772

773

774

775

776

777

778

779

780

781

782

783

784

785

786

787

788

789

790

791

792

793

794

795

796

797

798

799

800

801

802

803

804

805

806

807

808

809

810

811

812

813

814

815

816

817

818

819

820

821

822

823

824

825

826

827

828

829

830

831

832

833

834

835

836

837

838

839

840

841

842

843

844

845

846

847

848

849

850

851

852

853

854

855

856

857

858

859

860

861

862

863

864

865

866

867

868

869

870

871

872

873

874

875

876

877

878

879

880

881

882

883

884

885

886

887

888

889

890

891

892

893

894

895

896

897

898

899

900

901

902

903

904

905

906

907

908

909

910

911

912

913

914

915

916

917

918

919

920

921

922

923

924

925

926

927

928

929

930

931

932

933

934

935

936

937

938

939

940

941

942

943

944

945

946

947

948

949

950

951

952

953

954

955

956

957

958

959

960

961

962

963

964

965

966

967

968

969

970

971

972

973

974

975

976

977

978

979

980

981

982

983

984

985

986

987

988

989

990

991

992

993

994

995

996

997

998

999

1000

On main Vehicles screen, select the Vehicles you want to batch-edit.

1. (a) Click the **check boxes** next to each Vehicle's name. OR (b) to edit **all** Vehicles on the page, click the **check box** at top of Name column. OR (c) to edit **all** Vehicles in the system database, click the **Select All** button at top of screen.
2. Click the **Edit** button at top of screen. The **Batch Edit** screen will appear, as illustrated in the example below (where two Vehicles have been selected).

Batch edit

Check the box to edit the basic for the 2 vehicles selected

General Profile

Behavior Profile

**NOTE:** If ALL selected Vehicles share the same profile element, that element will appear in the corresponding field. For instance, in the example above, both selected Vehicles have the same **Make** (Yale), **Model** (MPE060LEN24T2748), **Vehicle Class** (Other), and **Behavior Profile** (Pallet Jack rider safety profile).

If ANY selected Vehicle has a different profile element than another selected Vehicle, the corresponding field will state "Retain Original Value."

3. Edit any field by clicking on the **check box** above that field.

3 Make

5

4

Sync 1

- Fields that can be edited by entering text freely: **Make**, **Model**, **Year**, **Weight Class**, **Capacity**, and **Parking Location**.
- Purchase Date** can be entered directly into the field (in MM/DD/YYYY format), or by clicking on the calendar icon.
- Fields that can be edited by choosing from pre-defined drop-down lists: **Vehicle Type**, **Vehicle Class**, and **Behavior Profile**.

**Examples** of how this feature can be used:

If a group of Vehicles park near a certain battery room, you can select all those Vehicles and edit their **Parking Location** to read "Battery Room 1."

If you create a new checklist for a certain type of Vehicle, you can select all the Vehicles of that type and change their **Behavior Profile** to the new checklist.

**Purchased Date**

Retain Original Value

**Parking Location**

Retain Original Value

**Behavior**

Interplast Pallet Jack rider safety

- Save batch-edits by clicking the **Save** button at bottom of screen. Or you can click **Go Back** to return to the previous screen.
- The system will automatically "sync" within about four hours. But if the changes you made are urgent, you can click the **Sync** button at top of screen.

## ADDING VEHICLES

**NOTE:** As a rule, you should NOT need to add any Vehicles to system manually. The automated in-fleeting process should occur with each Vehicle installation.

However, when you add a new Vehicle to your fleet, it is possible that only some Vehicle data will be captured (at a minimum: **Vehicle Type**, **Vehicle ID**, **VAC Serial Number**, **MAC Address**, and default **Behavior Profile & Group Assignment**).


If you only need to add **SOME** data for a new Vehicle, refer to the previous section on [Editing Vehicles](#). In the unlikely event, you need to add all Vehicle data manually, follow the instructions below.

### Adding Vehicles One at a Time



The screenshot shows the POWERFLEET interface with the 'Assets' tab selected. The 'Vehicles' section is highlighted with a red box. At the top right, there is a 'Select All' button, an 'Unselect All' button, an 'Add' button (highlighted with a red box), and a 'Sync' button. The 'Add' button is labeled with a red number '1'. In the top right corner of the screen, there is a 'Sync' button labeled with a red number '4'.

- From the main **Vehicles** screen, click the **Add** button at the top of the screen. The **Vehicles > Add** screen will appear:

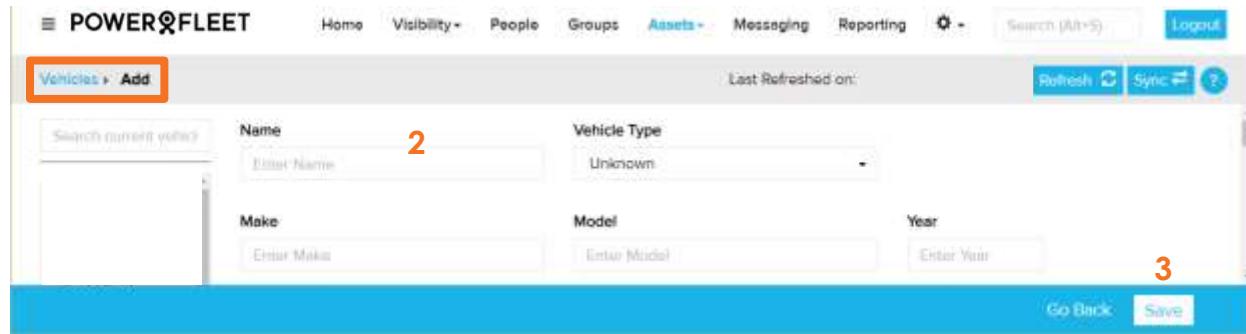

The screenshot shows the 'Vehicles > Add' screen. The 'Name' field is highlighted with a red box and labeled with a red number '2'. The 'Vehicle Type' dropdown is set to 'Unknown'. The 'Make' field is labeled 'Enter Make' and the 'Model' field is labeled 'Enter Model'. The 'Year' field is labeled 'Enter Year'. At the bottom right, there is a 'Save' button (highlighted with a red box) and a 'Go Back' button. The 'Sync' button from the previous screen is also visible at the top right.

- Enter all Vehicle-specific data as if you were editing the Vehicle, starting with [Editing Basic Vehicle Data](#). NOTE: (a) selecting **Vehicle Type** will auto-select the prefix for **Vehicle ID** and the default **Behavior Profile**; (b) **VAC Serial Number** and **MAC Address** cannot be entered manually; they are logged during installation.
- After entering all Vehicle-specific data, click **Save** (or **Go Back** to previous screen).
- The system will automatically “sync” within about four hours. But if adding the new Vehicle is urgent, you can click the **Sync** button at top of screen.


## Duplicating Vehicles to Save Time

If the new Vehicle you want to add to your system is the same **Make**, **Model**, and **Vehicle Type** as another Vehicle that already exists in the system, you can save time by using the **Duplicate** feature.



1. On the main **Vehicles** screen, locate a Vehicle that has the same **Make**, **Model**, and **Vehicle Type** as the new Vehicle you want to add.

2. Click the drop-down arrow at the end of the Vehicle's row and select **Duplicate**. The **Vehicles > Duplicate** screen will appear (same as the **Vehicles > Add** screen, except that **Make**, **Model**, **Vehicle Type**, and other data from the existing Vehicle will be automatically filled in for the new Vehicle):

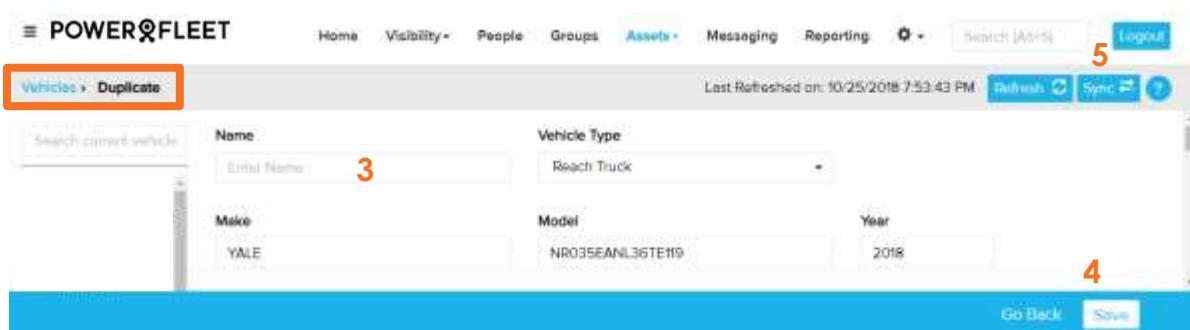

3. Enter additional Vehicle-specific data, including a unique Vehicle name, as if you were editing the Vehicle, starting with [Editing Basic Vehicle Data](#). NOTE: **VAC Serial Number** and **MAC Address** cannot be entered manually; they must be entered on the vehicle hardware (VAC) during installation.

4. After entering all Vehicle-specific data, click **Save** (or **Go Back** to previous screen).

5. The system will automatically “sync” within about four hours. But if adding the new Vehicle is urgent, you can click the **Sync** button at top of screen.